

## RECOMMENDED FITTING INSTRUCTIONS FOR ZENITH INWARD OPEN INDICATOR BOLT

1. Drill door in chosen position as shown in FIG1.
2. Locate faceplate 1 onto outside of door into drilled 7.5 dia holes. Engage operating pin 3 into elongated slot in door, ensuring pin 3 locates into slot in indicator disc inserted in faceplate (FIG 2). When bolt body 2 is positioned and operating pin is correctly engaged tighten using M4 threaded screws supplied through holes 4. **Important:** Before tightening ensure that when the bolt is in the closed position as in FIG 2 ensure that the indicator colour shows RED.
3. When door is in closed position locate and secure keeper 6 with self tap screws provided as FIG 2 & 3.

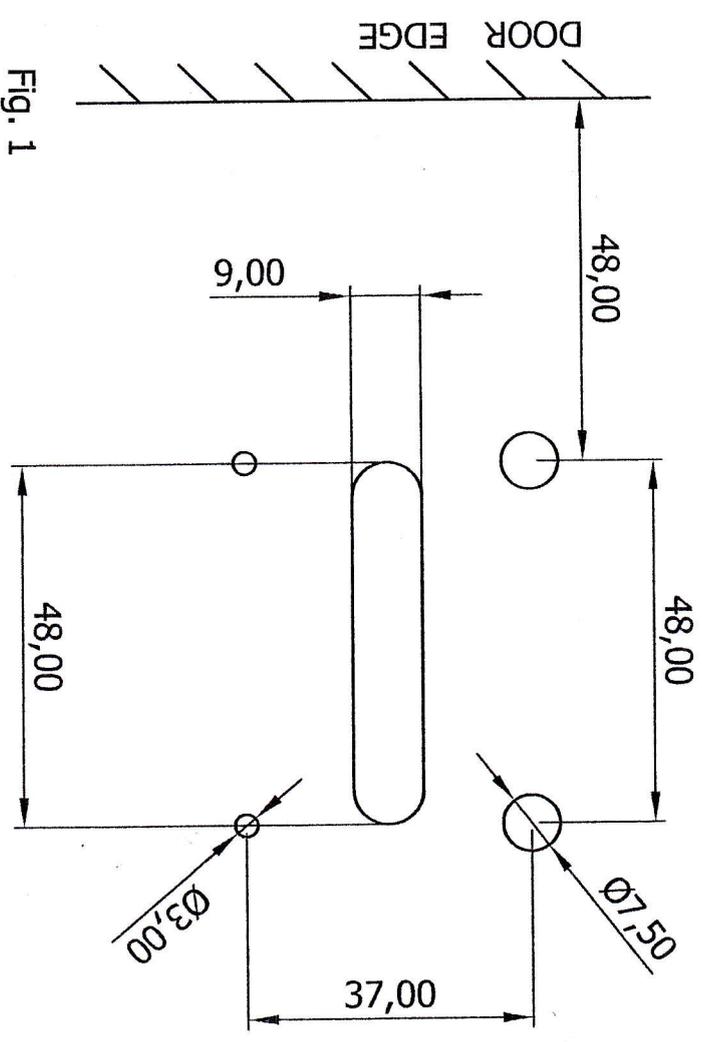


Fig. 1

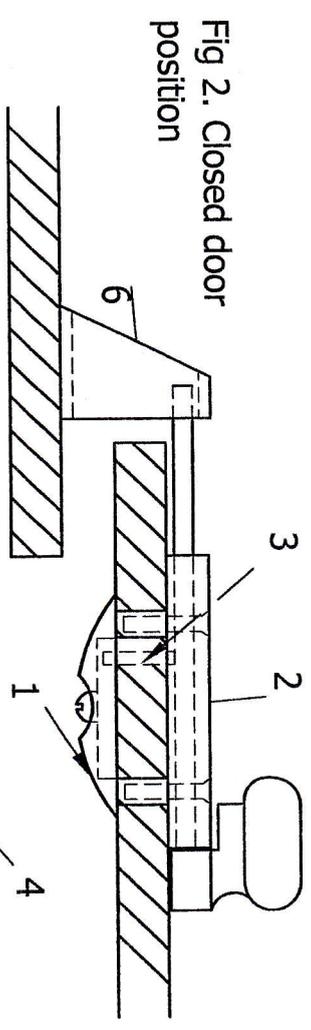


Fig 2. Closed door position

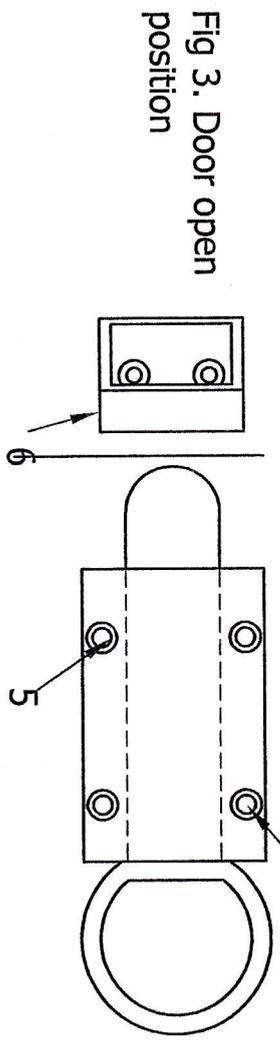


Fig 3. Door open position