

Fixing Instructions - HO18002 Toilet Backrest Rail

FIHO18002
ISSUE 02-10/19

SCREW PACK:





- 2 No. - Shield Anchor **A**
- 2 No. - Nylon Collar **B**
- 2 No. - Fixing Lug **C**
- 2 No. - Washer **D**
- 2 No. - M8x80 Hex HD Bolt **E**
- 1 No. - 3mm A/F Hex Wrench **H**
- 2 No. - M8x80 Coach Screw **G**



INSTRUCTIONS:

- 1) Drill $\varnothing 14 \times 60$ deep at 400 CRS at recommended height. (For fitting to masonry)
- 2) Clean drilled holes.
- 3) Insert Shield Anchor **A** & Collar **B** flush.
- 4) Locate and screw in tight, M8 Bolt **E** through Washer **D** & Fixing Lug **C**.
- 5) Locate grab Rail over Fixing Lugs, hold firmly against surface and secure in place by tightening Grub Screw **F** at both, top and bottom using Hex Wrench **H** provided.

For wood, drill pilot hole to suit and use Coach Screw **G** through Washer **D** & Fixing Lug **C**.

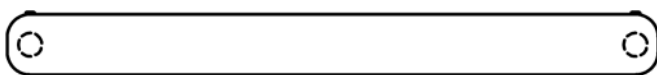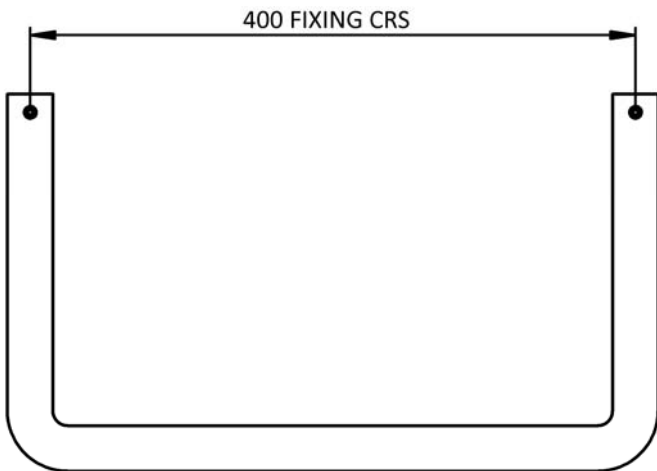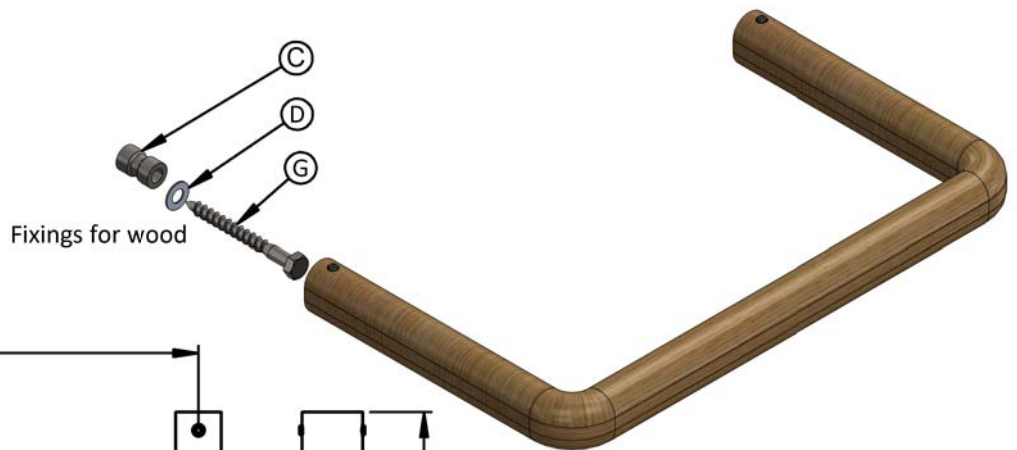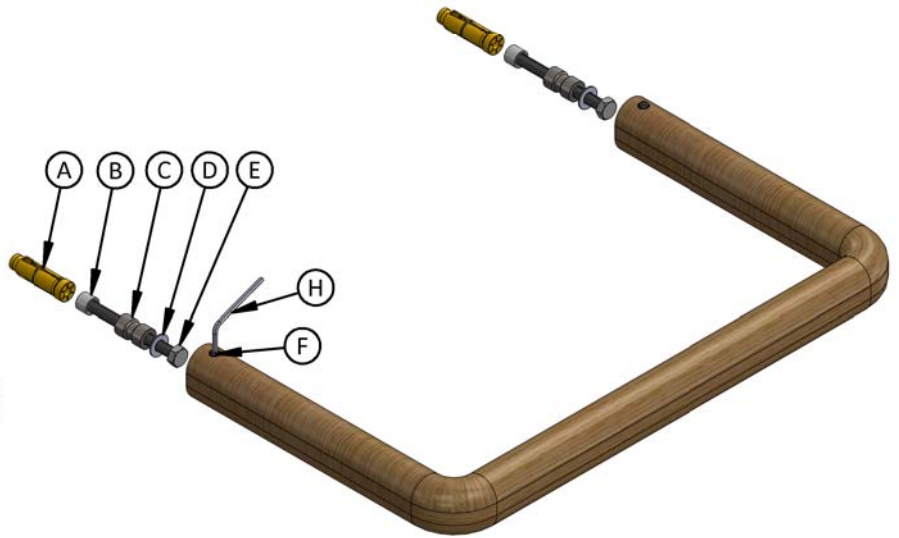

Recycle responsibly