


Product Specification Sheet

Part No.	Description	Last Updated
L2-21BB2	L2/21BB2 Partition Support	05/10/99

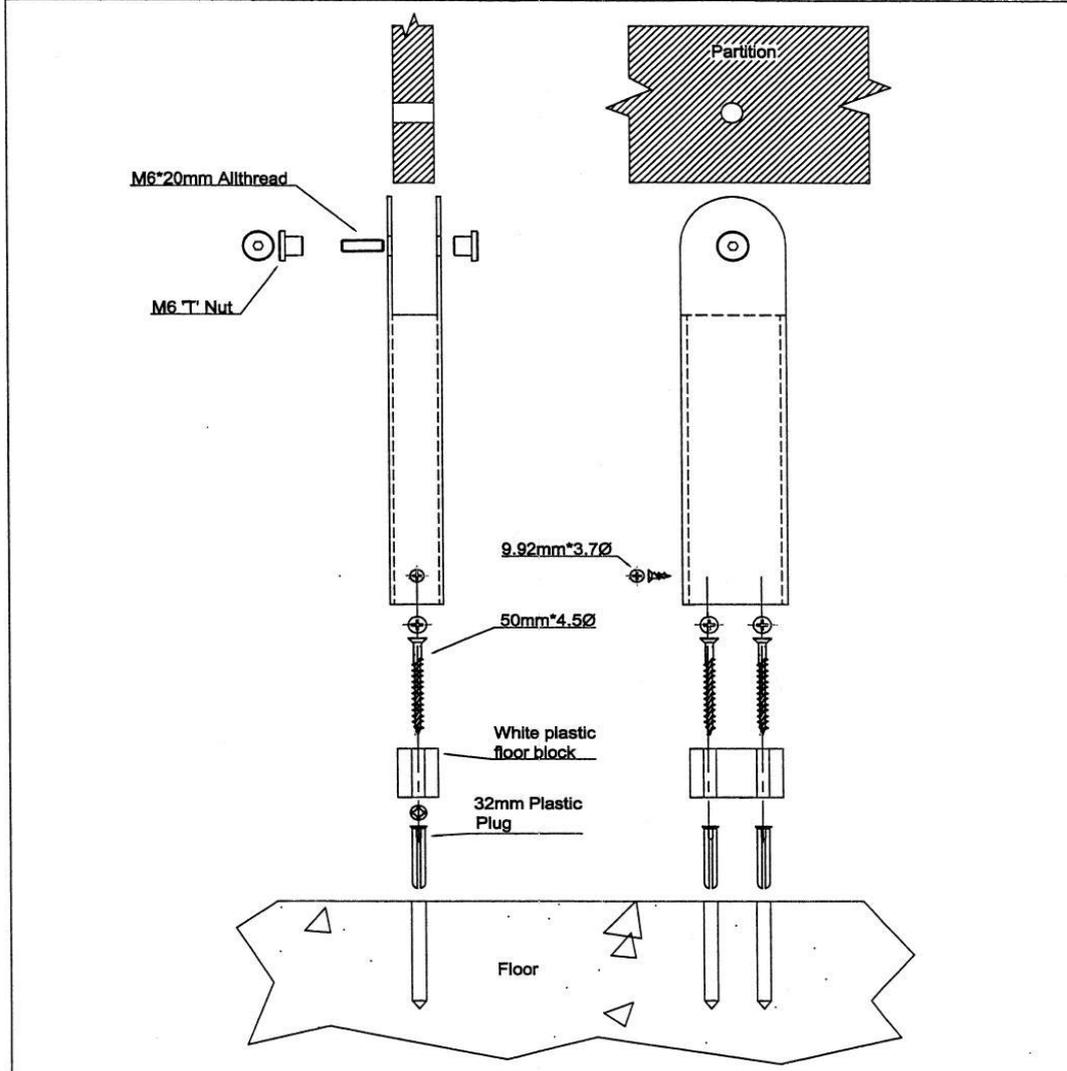

1. Prior to fitting a partition to the wall mounting brackets the leg needs fitting to the panel.
2. Mark off the vertical centreline of the leg onto the side front edge of the partition (usually within 250mm of the front edge)
3. The leg is then offered into position at the pre-marked centreline then drill through the leg and panel using a 10mm drill, the leg is fixed to the partition using the two M6 T nuts and 20mm allthread provided.
4. The partition is then offered to the wall mounted brackets (see separate fixing instructions) and temporarily secured whilst the position of the leg is marked on the floor.

5. The partition is then removed and the floor drilled using a 5.5mm masonry drill to a depth of 50mm.
6. Insert the plastic plugs into the holes.
7. Fix the plastic floor block to the floor using the 50mm screws provided.
8. The partition along with the attached leg is lowered onto the floor block and secured at the wall.
9. A No6 countersunk screw is used to retain the leg floor block.