




ROYAL



METAL ROYAL



ROYAL PALM




REMORA

IMPORTANT NOTES

Do not use any cleaning agents on this product. Clean using a non-abrasive cloth and warm water only.

Mark out prior to installation to ensure adequate space and clearance for products.

REFERENCE DIMENSIONS

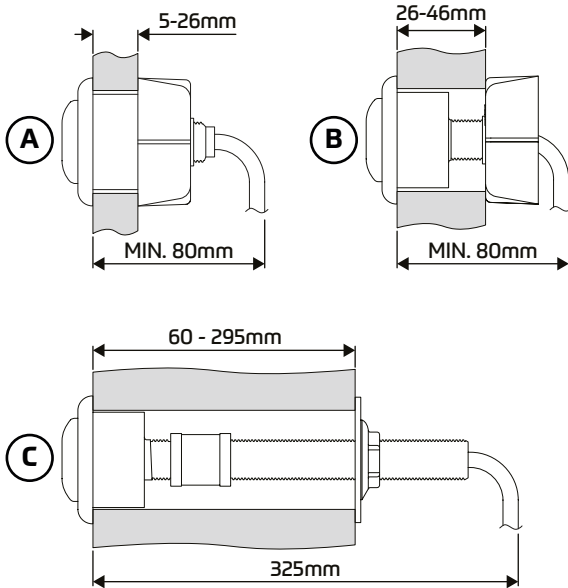


1


Ø40mm THRU
Ø45mm THRU (REMORA ONLY)

MIN. 56mm CTRS
TWIN BUTTONS ONLY


2

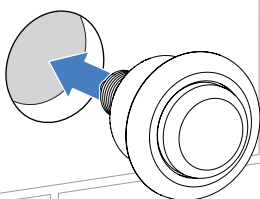


3

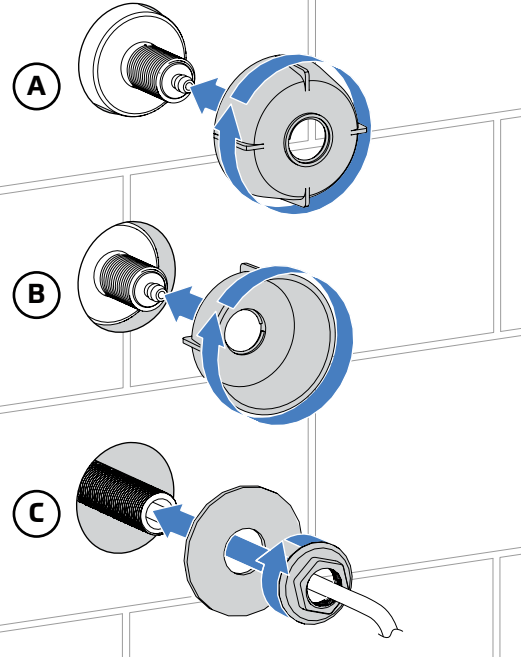

4

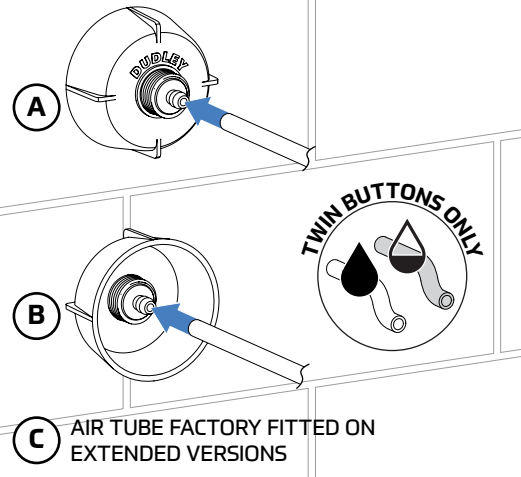


5

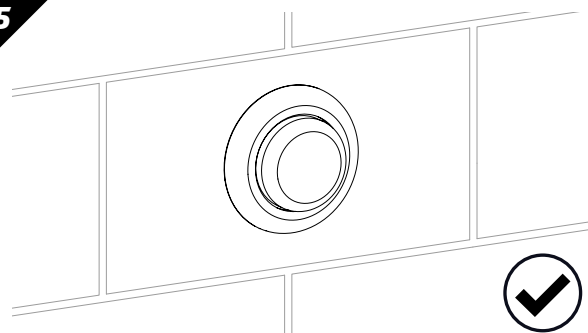

6

Final Installation Checklist

- ~ Check flush valve instructions for correct valve connection procedure.
- ~ Ensure air tubes are connected securely and routing is free from kinks and acute bends.
- ~ Check flush operation.
- ~ Visit www.tyde.co.uk for service & maintenance information.

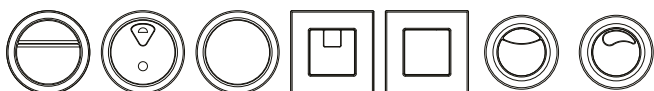

IMPORTANT NOTES

Do not use any cleaning agents on this product. Clean using a non-abrasive cloth and warm water only.

Mark out prior to installation to ensure adequate space and clearance for products.

REFERENCE DIMENSIONS

