


Specification Sheet		
Part No:	Description	Last Updated
L10	L10/L11 Partition Support Fixing Details	22/12/2014

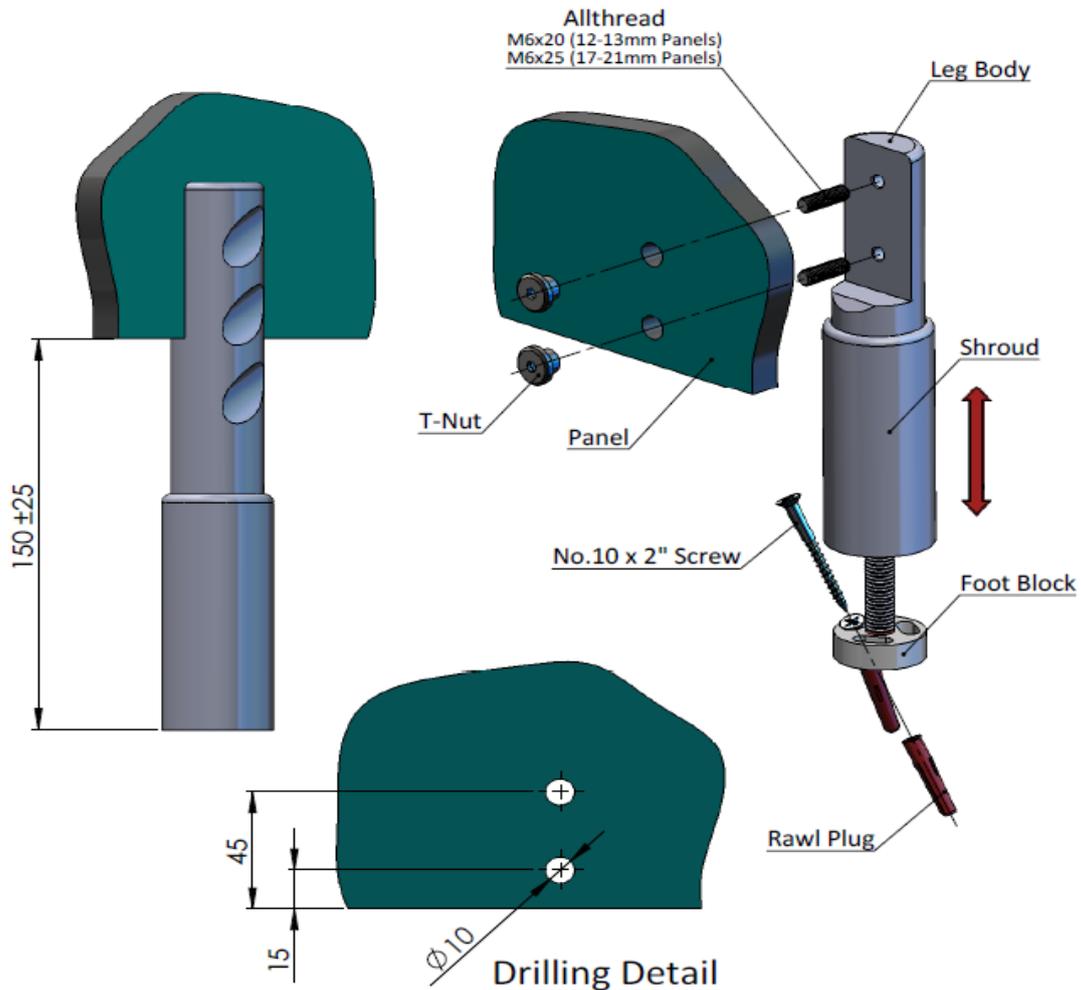

1. Mark off the vertical centreline of the leg onto the fascia and drill the two  $\varnothing 10$ mm holes, fit the leg to the panel as shown in the drawing above.  
**NOTE:** 2 Allthread sizes are provided (20mm for 12-13mm Boards & 25mm for 17-21mm Boards)
2. Raise up the shroud to access the adjusting mechanism of the leg. Screw the foot up into the leg as far it will allow.
3. The partition can now be offered up to the wall mounting brackets and using packing pieces set the required height (normally 150mm).
4. The foot block can now be adjusted down to the floor level until it takes the weight off the packing pieces. Secure to the floor by drilling through the slotted holes in the foot block with a  $\varnothing 5.5$ mm masonry drill, the holes need to be at least 45mm deep.
5. Push the red plug into the floor hole and secure the leg using the screws provided.
6. Lower the shroud back down the leg until it is resting on the floor.