


Specification Sheet

Part No.	Description	Last Updated
B3/19BB1	B3/19BB1 Channel Brackets for 17-19 Panels	04/10/99

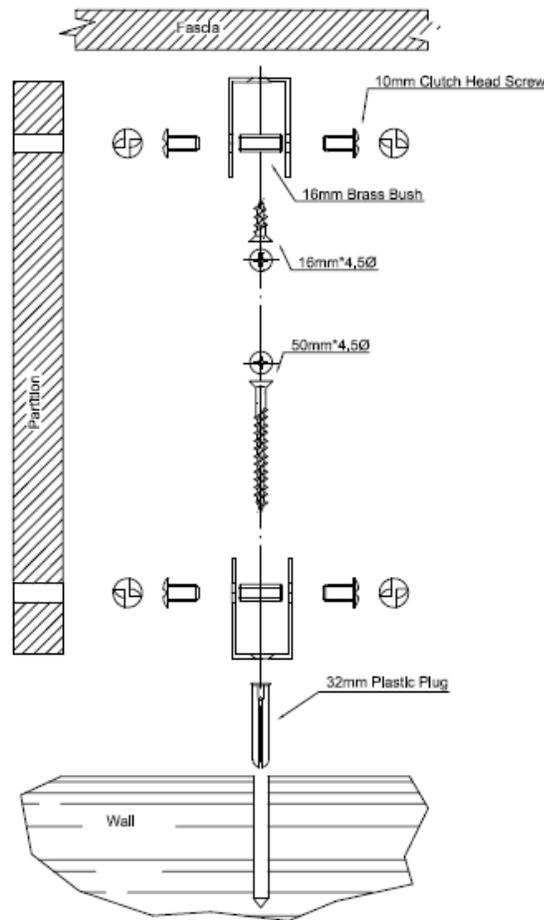

1. Mark off the centreline position on the wall.
2. Determine the position of the brackets on the centreline and mark the two hole positions per bracket.
3. Drill the holes 5.5Ø to a minimum depth of 50mm.
4. Insert the six 32mm plastic plugs into the holes.
5. Secure the brackets to the wall plugs using the 50mm*4,5Ø screws provided.
6. Repeat step one on the fascia panel.
7. Determine the position of the brackets on the fascia and mark off the six hole positions.
8. Use a small drill to pilot the six holes to a maximum depth of 14mm.

NOTE:

Take care not to break through the front face of the panel.

9. Secure the brackets to the fascia with the six 16mm*4,5Ø screws provided.
10. Set the partition into the wall brackets ensuring the height and level are correct.
11. Drill through the pre-drilled brackets using a 7mmØ drill.
12. Secure the panel to the brackets using the Clutch head screws and brass bush provided as shown above.
13. Repeat steps 10-12 for the fascia panel fitting to the partition.