


Multirol hinge fixing - Face/single t-nut fix.

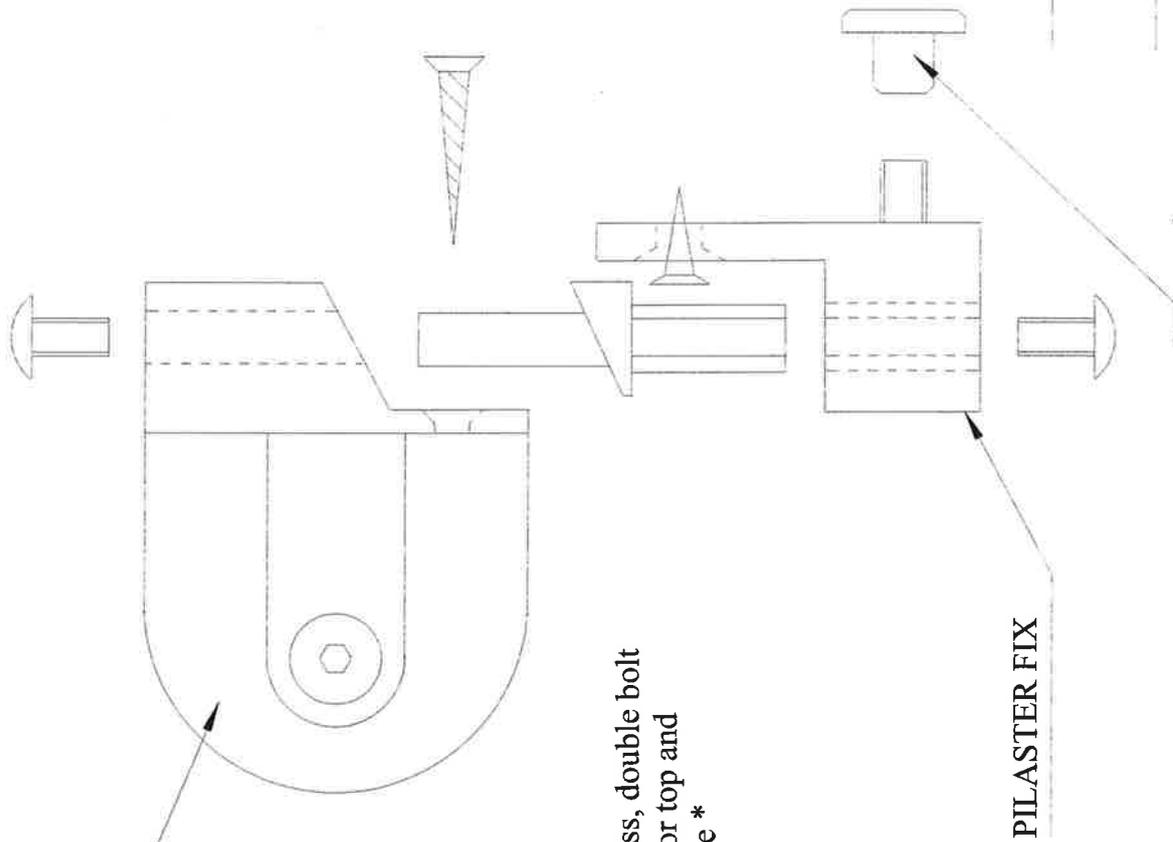

* For solid grade + glass, double bolt through is required for top and bottom holes of hinge *

T- Nuts are optional on 18/20mm boards.

Recommended fixing procedures for Multirol hinges:

Female upper side.

1. Locate female hinges in position on door edge.
2. Drill through hole 9mm dia.
3. Secure with through fixing.
4. Drill into door edge for No8 woodscrew.
5. Fit No8 screw.

Male lower side.

1. Locate the male hinge in position on the pilaster using allthread and securing with woodscrew. (A through fixing or threaded insert is strongly recommended for this purpose if using solid laminate boards).
2. Position nylon cam and pin in Fall Open or Fall Closed position before hanging doors.

Final assembly.

1. Fit screw in each end of hinge pins.