

# FIXING INSTRUCTIONS FOR T113SMR

N.B. It is recommended that a professional glass drilling company is used to cut all holes in glass.


## Fit the hinge to the Pilaster

Cut 2 x 12mm holes in your glass in the required places (see Drilling information for guidelines)

Unscrew the fixings supplied from the bottom leaf.

Screw back together as in the diagram to the right, clamping the glass in between the leaf & patch plate.

Ensure that the patch plate and the hinge leaf are separated from the glass by the plastic washers supplied and also ensure the plastic sleeve covers the thread separating the bare metal from the glass.

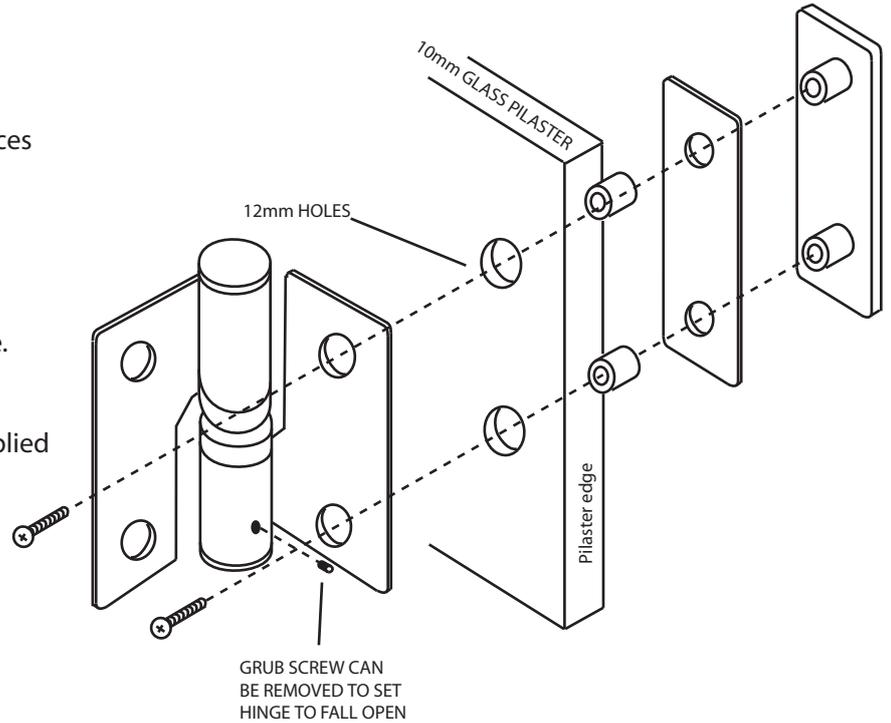


## Fit the hinge to the Door

Once the hinge leaf is fitted to the pilaster, cut 2 x 20mm slotted holes in your glass in the required places (see Drilling information for guidelines)

Unscrew the fixings supplied from the top leaf.

Screw back together as in the diagram to the right, clamping the glass in between the leaf & patch plate.

Ensure that the patch plate and the hinge leaf are separated from the glass by the plastic washers supplied and also ensure the plastic sleeve covers the thread separating the bare metal from the glass.

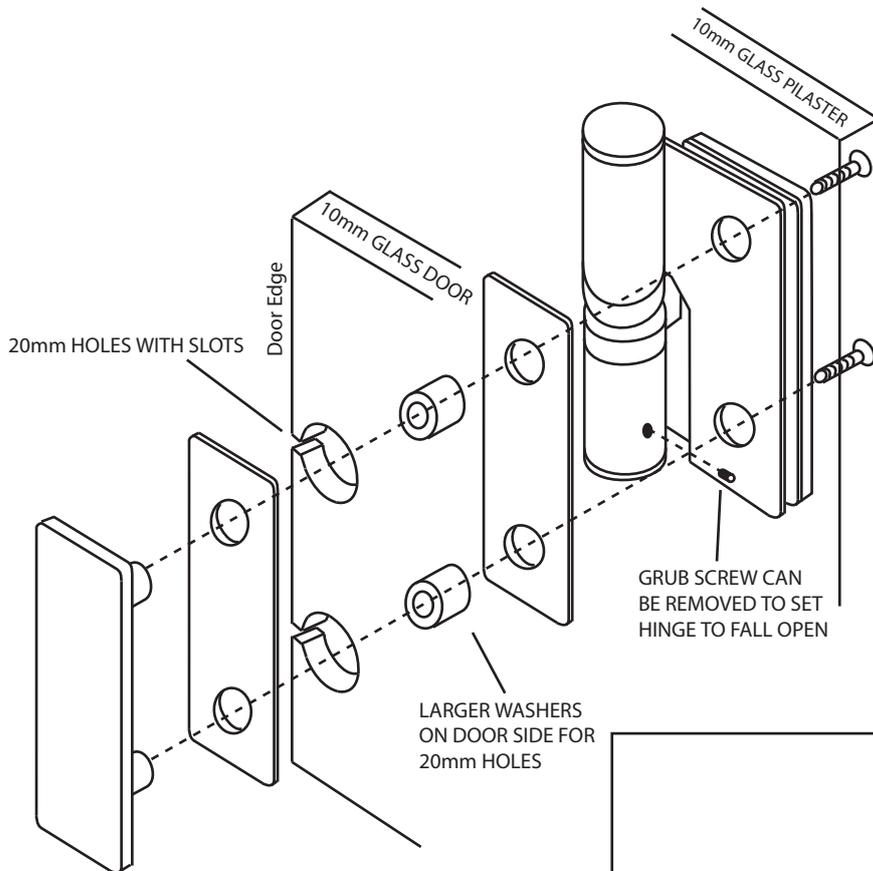

## Plan View of Fitted Hinge

