


T204 instructions Rev1.02

NOTE

Please check dimensions as shown on template as some printers stretch or shrink the template.

Place keep in position and check clearance **before** drilling pilot holes as any adjustment due to differing site dimensions and door overlap will need to be taken up here.

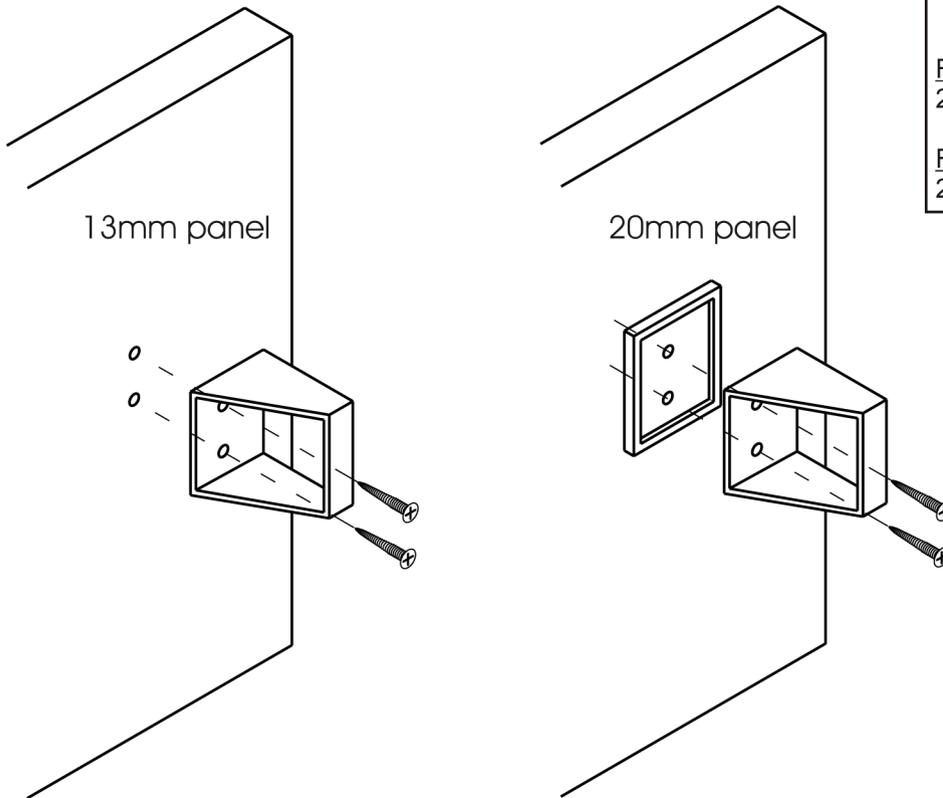

1. Pilot holes as template.
2. Screw keep to pilaster with suitable screws
3. Fit black plastic spacer when using 20mm panels.
4. Fit rubber buffers 12mm from edge of pilaster.

Fold to edge of pilaster

Edge of door

25 mm

46 mm

18 mm

