

INWARD OPEN

Note:- Handle fitted with spacer for 20mm door change for 13mm door (Longer spacer supplied)
 (Template assumes 25mm door overlap on bolt side see page 3)

1. Fold template along line and position on edge of pilaster.
2. Mark hole centres as template.
3. Drill 2 pilot holes 'A' for woodscrews. (Inside of pilaster only).
4. Drill 2 holes 'B' 5mm dia.
5. Drill 1 hole 'C' 15mm dia.
6. Screw handle side of bolt to pilaster through holes 'A' using 4mm X 15.5mm CSK screws. (Handle in open position)
7. Fit 5mm square spindle into indicator. (Alternative spindles for 20mm and 13mm supplied).
8. Bolt indicator to pilaster through holes 'B'. (With indicator showing WHITE).
9. Fit Cover plates to front and rear bolt mechanisms.
10. Fit Rubber Buffers to top and bottom of door with 4mm X 8.5mm screws.

NOTE


Please check dimensions as shown on template as some printers stretch or shrink the template.

Place backplate on template to check template accuracy **before** drilling.

Holes A - Pilot for woodscrew (Inside of pilaster only)

Holes B - Drill 5mm dia

Hole C - Drill 15mm dia

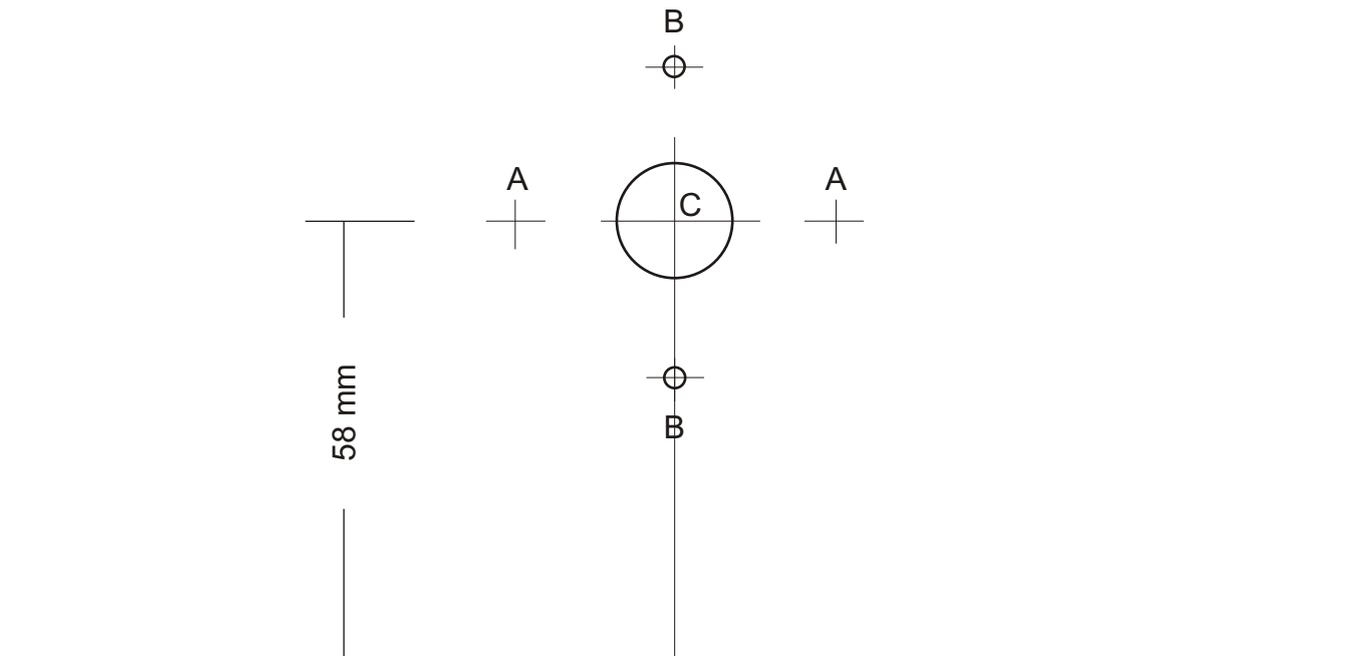

INWARD OPEN - Fold along line and align with edge of pilaster

