




Product	SELECT wash basin bracket, wall-mounted with floor support, electrically height adjustable with lever control
Item number Colour Product description	<p>R4950112 VVS:654005112 NRF:6132542 EAN:5708590322414 NBS:N13:30,335</p> <p>Anthracite grey</p> <p>SELECT wash basin lifter, floor standing. Electrically height adjustable 300 mm with lever control. Recommendation: flexible feed/waste system R2065 (UK market R2075). Incl. fixing bolts for wash basin (Recommended with MATRIX SMALL and MATRIX CURVE/NEW CURVE wash basins). Excl. fixing kit. See Technical datasheet (pdf) for information on fixings suitable for various wall types.</p>
Adjustability Adjustment height Product capacity Speed, upwards Noise level	<p>Height adjustable</p> <p>300 mm</p> <p>Maximum load: 150 kg. Suitable for wash basins that weigh 16-22 kg. When the wash basin is loaded with 150 kg, each wall fastener will be carrying 18 kg. <i>Wash basin brackets need to be able to carry the weight of the wash basin, as well as support the weight of the person who is leaning against the wash basin or who is using the wash basin to rise from seated position.</i> <i>Neither wash basin nor wash basin brackets are intended to carry a person, and the test methods applicable to wash basin brackets reflect this: ISO 17966 prescribes a static test on the front edge of the wash basin at 75% of maximum user weight, i.e. when the maximum load on a wash basin bracket is given as 150 kg and the wash basin weighs 20 kg, it is – according to ISO 17966 – the equivalent of a user weighing 173 kg leaning on the front edge of the wash basin.</i></p> <p>Speed up mm: 21 mm/s Speed down mm: 21 mm/s</p> <p>45 dB</p>
Materials	<p>The wash basin lifter is mainly constructed of anodised aluminium. The front plate and the bottom plate are made of polystyrene (PS).</p>

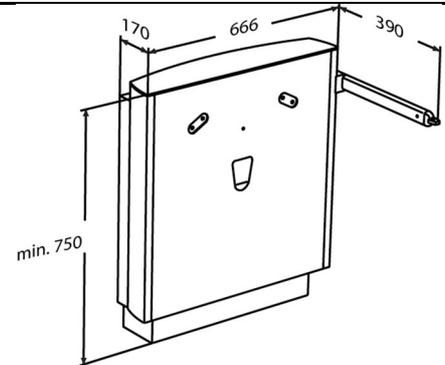



Product	SELECT wash basin bracket, wall-mounted with floor support, electrically height adjustable with lever control
Ergonomy	The lifter's stringent and pure design as well as smooth surfaces are easy to clean and attractive to look at. They also help ensure good hygiene in the bathroom. The exclusive aluminium side profiles are light, durable and elegant to look at.
Features	The wash basin is raised or lowered using the wired hand control or the lever control at the end of the wash basin. The lever control can be positioned on either side of the wash basin and also serves as a towel holder. The lever control is strong enough to be used as an extra support. The wash basin can be adjusted 300 mm – from 670 to 970 mm above the floor.
Mains connection (V)	230
Actuator (motor)	LA31 Careline, (Linak), 1500N, IPX4
Control box	CB9 Careline, (Linak), IPX6
Power consumption (maximum load)	Power consumption by maximum load: 75 W Power consumption by standby: 1,5 W
Warranty	Pressalit makes a commitment to remedy material and manufacturing defects for a period of five years from the invoicing date.










Product	SELECT wash basin bracket, wall-mounted with floor support, electrically height adjustable with lever control
Cleaning	<p>PLUS & SELECT wash basin brackets. The product is to be cleaned with hot water or a mild soapy cleaning agent. Do not use chlorine based, corrosive or abrasive cleaners as it may result in the surface being damaged.</p> <p>The following cleaning agents have been tested by Pressalit and may be used, as long as they are diluted according to the instructions on the container.</p> <p>DISINFECTANTS: Clinimax Difficil-S Erisan OXY+</p> <p>NON-DISINFECTANTS: Suma Star free D1 Taski 100 Taski 200</p> <p>The product must be wiped down with a soft rag wrung out in clear water immediately after cleaning, as some materials may otherwise be discolored and stained, and the surface coating may deteriorate.</p> <p>DECALCIFICATION OF ALUMINUM PARTS: Pressalit recommends that chalky deposits be removed from wall tracks and other aluminum parts using a solution of three parts 30% acetic acid to seven parts tap water. When the aluminum parts have been washed down with this solution, the parts must be wiped over with a damp cloth wrung out in clear water.</p>
Declaration of conformity	<p>This product complies with the requirements of Council Directive 93/42/EEC concerning medical devices, as last amended by Council Directive 2007/47/EC of 5 September 2007. It also complies with all relevant requirements in the Council Directive 2006/42/EC (of 17 May 2006) on machinery and the Council Directive 2011/65/EC on RoHS.</p>











Product	SELECT wash basin bracket, wall-mounted with floor support, electrically height adjustable with lever control
----------------	---

Installation in different wall types

	Concrete >B25 V8605 - Fixing kit, 4 coach screws Ø10 x 70, plugs SX12, with grey screw covers. To be ordered separately.
	Solid Brick >= Mz12 V8605 - Fixing kit, 4 coach screws Ø10 x 70, plugs SX12, with grey screw covers. To be ordered separately.
	Solid Sand Lime Brick >= Hlz12 V8605 - Fixing kit, 4 coach screws Ø10 x 70, plugs SX12, with grey screw covers. To be ordered separately.
	Aerated Concrete P4 V8655 - Fixing kit, 4 coach screws Ø10 x 70, plugs GB14, with grey screw covers. To be ordered separately.
	Drywall (2 x 12,5 mm) water-resistant, re-enforced with wood V8605 - Fixing kit, 4 coach screws Ø10 x 70, plugs SX12, with white screw covers. NB! Plugs are not needed. To be ordered separately.



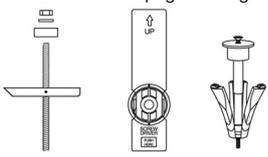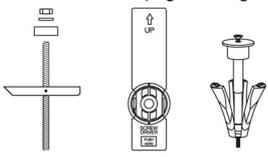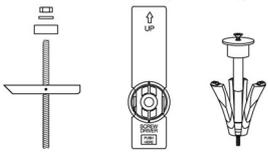

<p>Product</p>	<p>SELECT wash basin bracket, wall-mounted with floor support, electrically height adjustable with lever control</p>	
	<p>Drywall (2 x 12,5 mm) water-resistant, re-enforced with 22 mm plywood</p> <p>Wall fasteners (4 pcs) must be bought separately, for drywall it is possible to use e.g. fischer KD8 toggles or similar.</p>	<p>fischer KD 8 snaptight wingit</p> 
	<p>Drywall (2 x 12,5 mm) water-resistant, re-enforced with steel plates (2 mm)</p> <p>Wall fasteners (4 pcs) must be bought separately, for drywall it is possible to use e.g. fischer KD8 toggles or similar.</p>	<p>fischer KD 8 snaptight wingit</p> 
	<p>Drywall (2 x 12,5 mm) water-resistant</p> <p>Wall fasteners (4 pcs) must be bought separately, for drywall it is possible to use e.g. fischer KD8 toggles or similar.</p>	<p>fischer KD 8 snaptight wingit</p> 

It is the responsibility of the installer to ensure that suitable wall fasteners are used.

